

| III. | Description | Part No. |
|------|--|---|
| | KITS Overhaul Kit | 256 02 01ZF |
| | GASKETS Pan gasket (part of sump) | 256 27 01 |
| | RUBBER COMPONENTS Pump O ring | 231 16 02 |
| | Valve body sleeves: 4 per transmission | 256 20 01 (1) 256 20 02 (1) 256 20 03 (2) |
| | METAL CLAD SEALS Pump | 231 15 01 |
| | Output shaft | 231 15 02 |
| | FRICTION PLATES A clutch (3) | 256 11 01ZF |
| | B clutch (4) | 256 11 03ZF |
| | C clutch (4) | 256 11 05ZF |
| | D clutch (5) | 256 11 04ZF |
| | E clutch (4) | 256 11 02ZF |
| | STEEL PLATES A clutch (4) | 256 12 01 |
| | B clutch (4) | 256 12 03 |
| | C clutch (4) | 256 12 05 |
| | D clutch (5) | 256 12 04 |
| | E clutch (4) | 235 12 02 |
| | FILTER Filter is part of the sump | 256 27 01 |
| | BUSHES Pump (needle sleeve) | 231 21 01 |
| | HARD PARTS Oil collecting plate (tin cover locks over front gear set) | 256 29 01 |
| | Pump | 231 38 01 |
| | V/B intermediate sheet (b/c 006) | 231 62 06 |
| | MANUALS ZF 6HP19 repair manual on CD | 231 33 20 |
| | CONVERTERS BMW 1071 010 006 | C231 30 01 |