




Transmission Leak Tester N190 33 07

Stop those irritating and costly external leaks before your unit is fitted into the car by using a simple method of “Air decay”.

Simply feed a regulated air supply to the transmission and torque converter normally, via the breather. Seal all open areas using either the original part, or alternatively, a suitable bung. When the unit is full of air close off the tap and wait to see if the gauge decreases.

Even the smallest of leaks show up quickly.

Simple but VERY effective !!!!

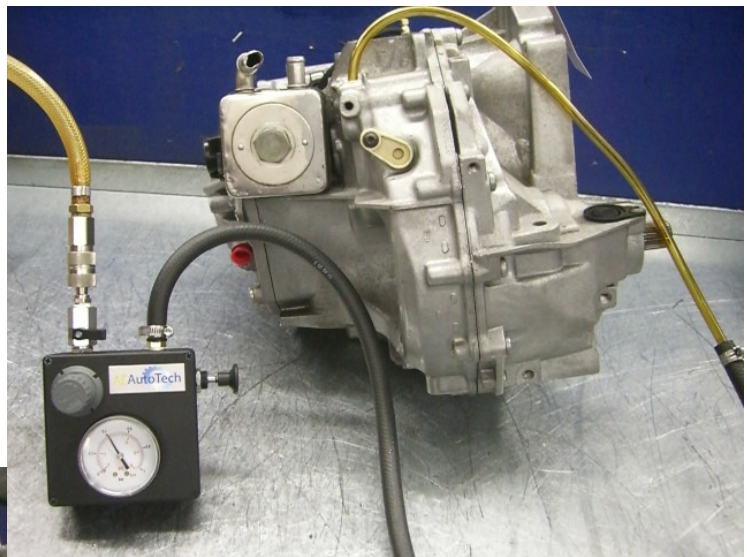

JP (Automatic Transmissions) Ltd
Units 4a & 4b Pear Tree Industrial Estate, Upper
Langford, N. Somerset, BS40 5DJ, UK

Tel +44 (0) 1934 852772
Fax +44 (0) 1934 852211
info@jpat.co.uk www.jpat.co.uk